


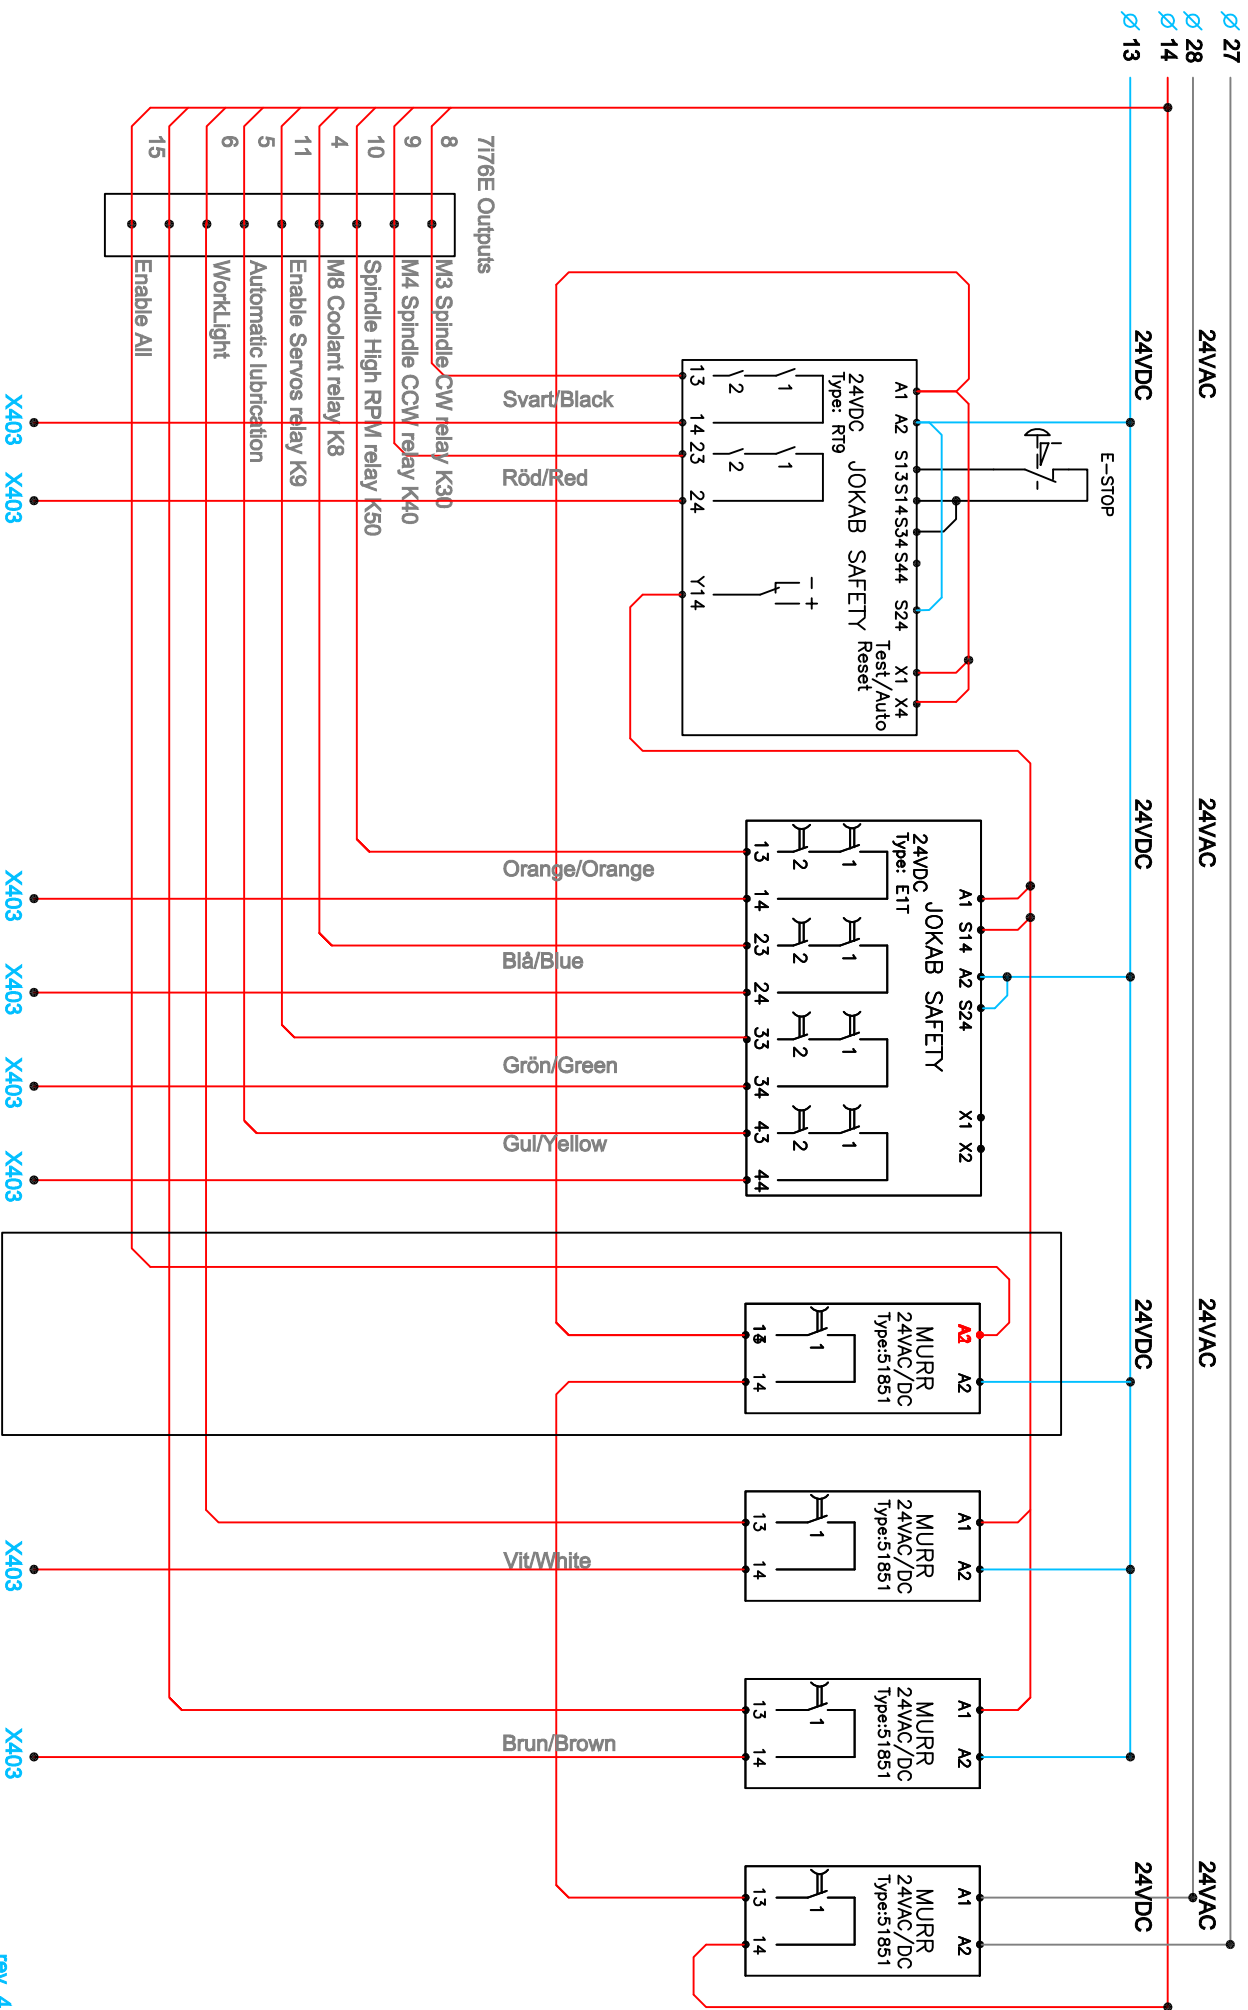

CHANGE POLARITY ON EACH RELAY
in main relay panel on each of these outgoing connections