



Aug 18, 2020 DYN4 to Mesa 7i76 Spindle

Notes:

- Put servo drive in Analog command input mode
- Put servo drive in Speed Servo Mode
- See DYN4 manual Appendix C for detailed analog instructions
- DYN4 LINE_NUM parameter is encoder output resolution
- * See DYN4 manual section 4.5
- DYN4 Enable logic is Active High.
Servo drive is Enabled when ENA input is HIGH.
- DYN4 Alarm logic is Active LOW.
Servo drive is Alarm/Faulted when ALM output is LOW.
- Motor rotation direction is CW with positive Analog.
- Rotation direction can be reversed by reversing AIN+ and AIN- signals.

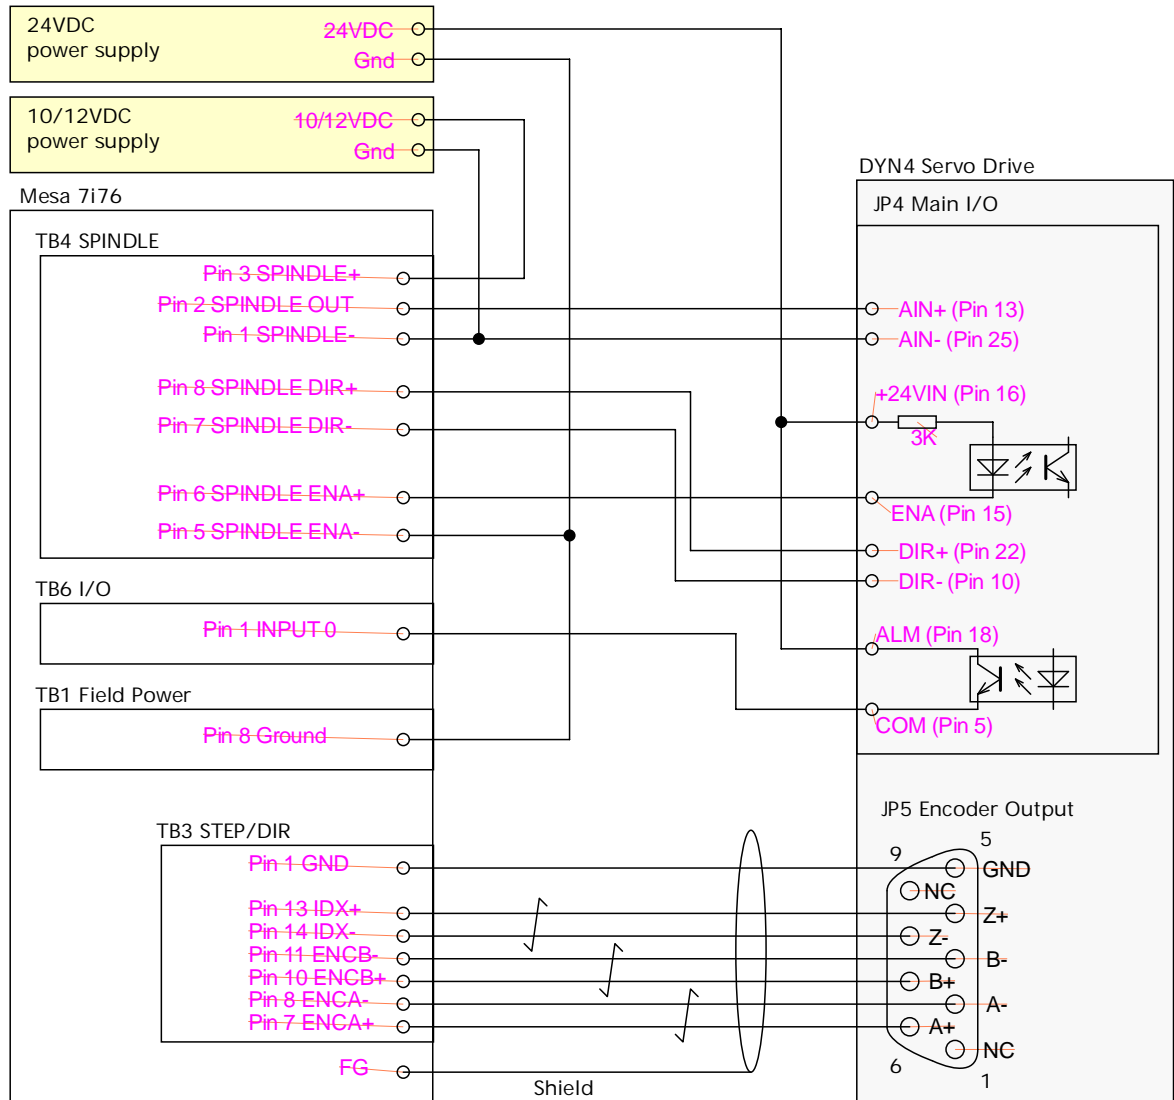

Responsible dep.	Technical reference	Created	Approved			
		Document type	Document status	Rev. R2		
		Title, supplementary title	Scale			
		Date of issue 16/02/22	Lang.	Sheet 1/1		