
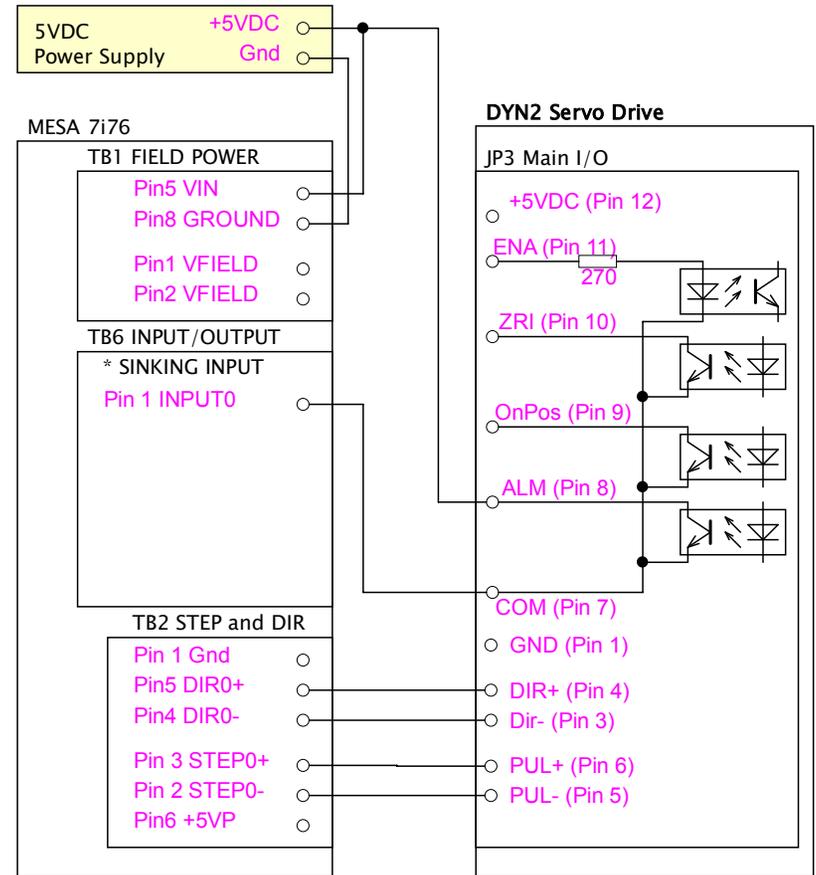


Note:

- Servo drive enable logic default is active high/enabled when high
- Servo drive alarm is active low, output is low when servo drive fault/alarm
- Set servo drive to PULSE/DIR command input mode, position servo mode

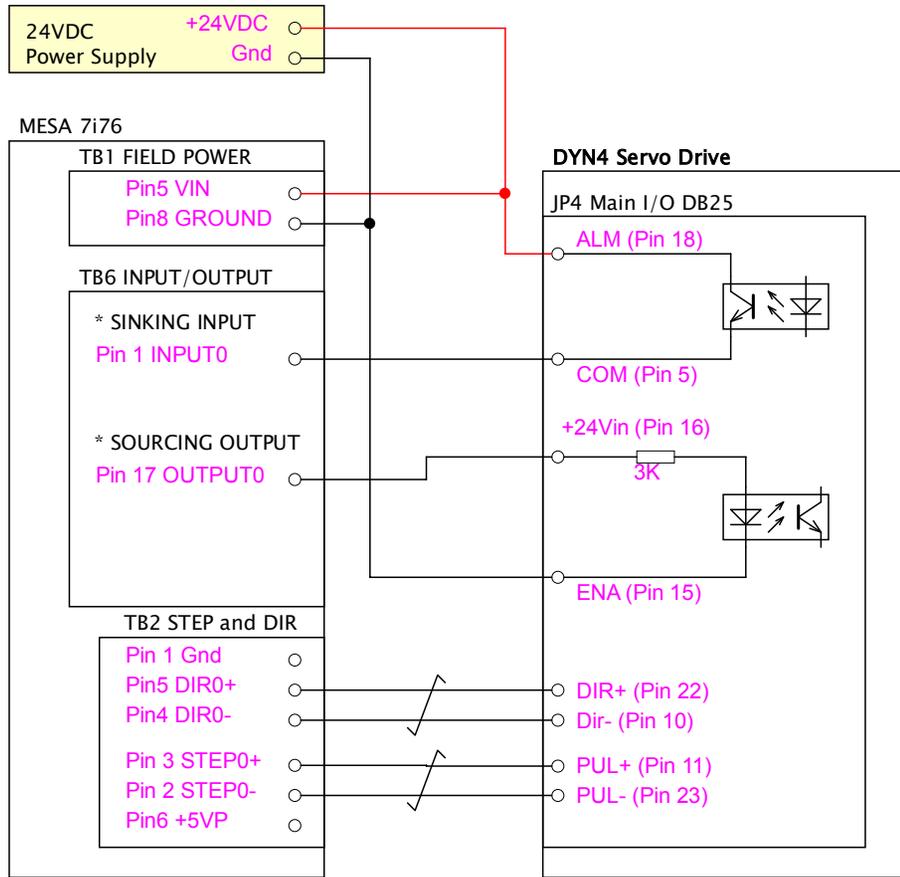

7i77 Reference: <http://www.mesanet.com/pdf/parallel/7i76man.pdf>

Document#
dyn2-4_7i76_V1.0
Version 1.0

Responsible dep.	Technical reference	Created	Approved			
		Document type	Document status	Rev.		
		Title, supplementary title	Date of issue	Scale	Sheet	
		2017/4/4	Lang.	1/1		